



**SWAYING ZOMBIE PROP - PMP - APRIL 2ND, 2016**

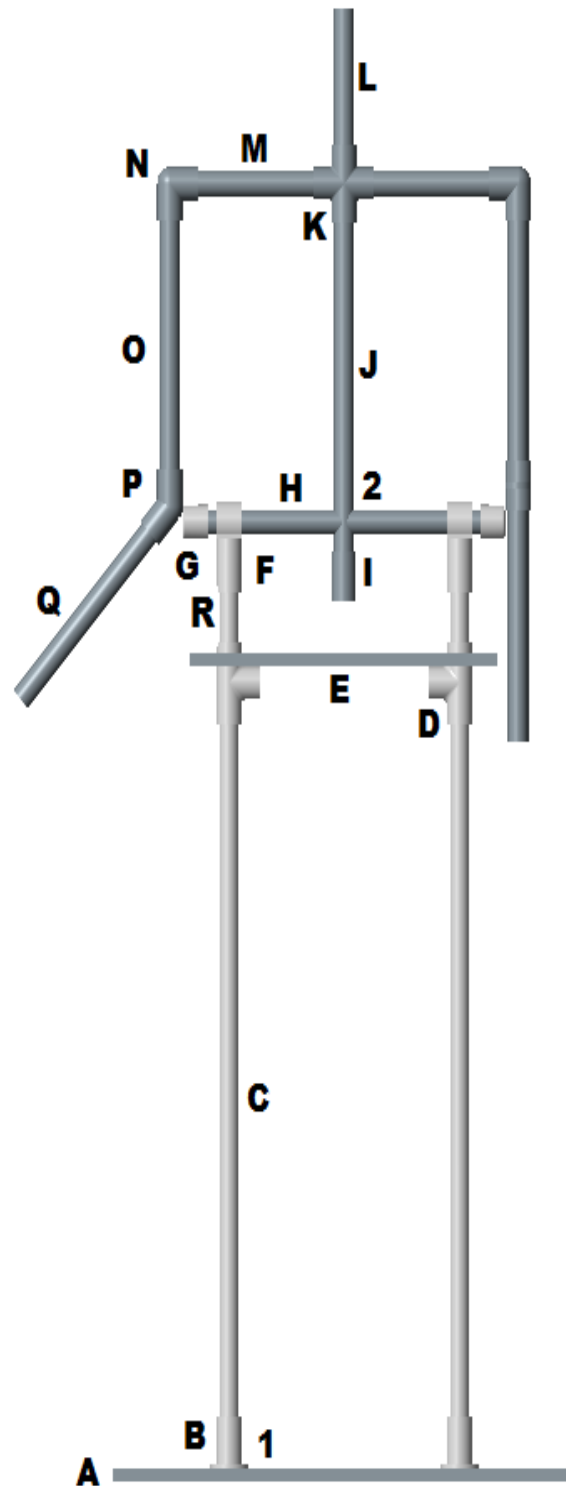

**PARTS LIST:**

- A - WOOD BASE - 2' X 2' X 1/2" PLYWOOD**
- B - PVC TAB CAP 1" - PVCFITTINGSTORE.COM**
- C - PVC 1" X 36"**
- D - PVC 1" T**
- E - WOOD WAIST - 16" X 8" X 1/2" PLYWOOD**
- F - PVC SLIP T 1" - PVCFITTINGSTORE.COM**
- G - PVC END CAP 1"**
- H - PVC 1" X 15"**
- I - PVC 3/4" COUPLER**
- J - PVC 3/4" x 20"**
- K - PVC 3/4" CROSS**
- L - PVC 3/4" X 6" (Head Mount)**
- M - PVC 3/4" X 8"**
- N - PVC 3/4" ELBOW**
- O - PVC 3/4" X 10"**
- P - PVC 3/4" 45 DEGREE ELBOW**
- Q - PVC 3/4" X 10"**
- R - PVC 1" x 9"**
- 1 - FLAT PHILLIPS 10-24 X 1.5" (BASE MOUNTING)  
w/ WASHER & LOCKNUT (QTY:6)**
- 2 - BUTTONHEAD PHILLIPS 1/4"-20 X 3" (WAIST PIVOT)  
w/ WASHERS (QTY:3) & LOCKNUT (QTY:1)**

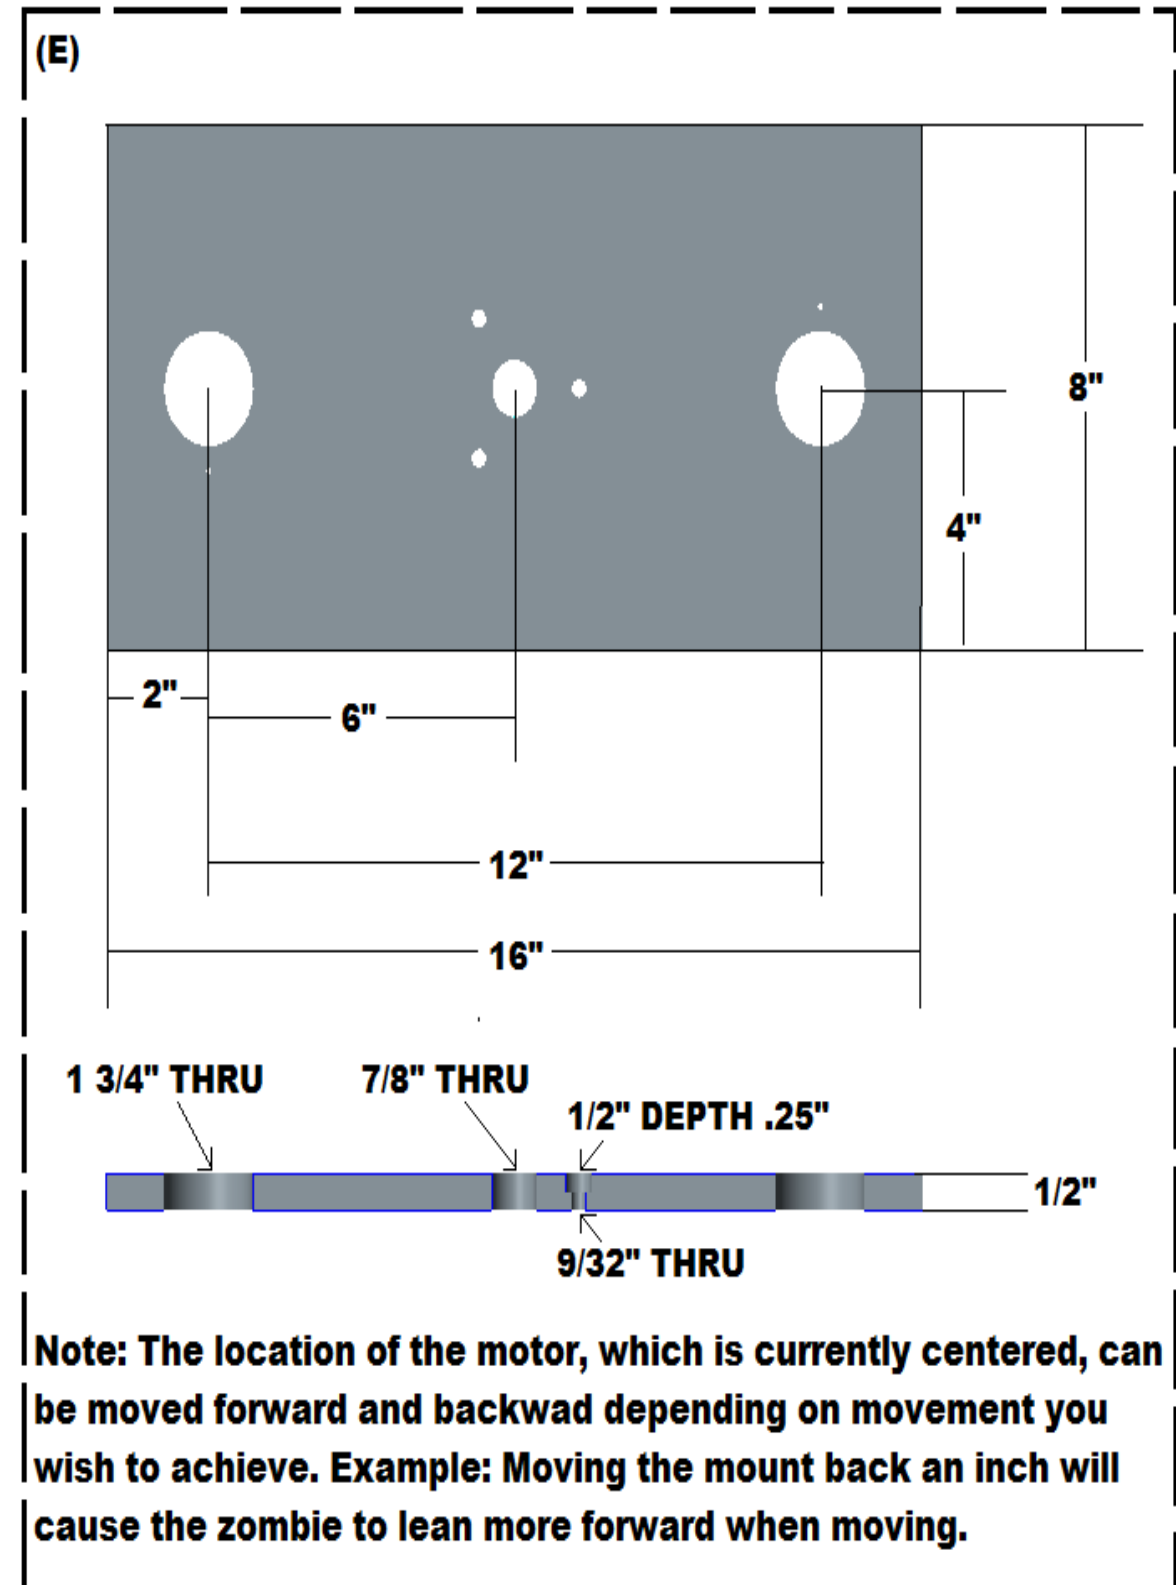



**Turned feet in opposite direction, for more stability as it rocks. Center to Center width is 12".**



**Turned T's, one forward and one back, for stability of wood motor base.**

**Bolt is located 7.25" up from bottom of spine.**



**Used a 1/4"-20x3" bolt for waist pivot. Placed washer between all pieces, including the bolt & nut.**

**Countersunk motor mounting holes 1/4", due to 1/2" thick wood motor base.**



**Added a 1" wood screw into the T's to mount wood base.**







[HTTP://WWW.POORMANPROPS.WEEBLY.COM](http://www.poormanprops.weebly.com)